

# NVIP-4Q-6101/PIR/W



Quick start guide

# **IMPORTANT SAFEGUARDS AND WARNINGS**

### THE PRODUCT MEETS THE REQUIREMENTS CONTAINED IN THE FOLLOWING DIRECTIVES:

**DIRECTIVE 2014/30/EU OF THE EUROPEAN PARLIMENT AND OF THE COUNCIL of 26 February 2014** on the harmonization of the laws of the Member States relating to electromagnetic compatibility (OJ L 96, 29.3.2014, p. 79–106, with changes).



eng

**DIRECTIVE 2012/19/EU OF THE EUROPEAN PARLIAMENT AND OF THE COUNCIL of 4 July 2012** on waste electrical and electronic equipment WEEE) (OJ L 197, 24.7.2012, p. 38–71, with changes).



**DIRECTIVE 2011/65/EU OF THE EUROPEAN PARLIAMENT AND OF THE COUNCIL of 8 June 2011** on the restriction of the use of certain hazardous substances in electrical and electronic equipment (OJ L 174, 1.7.2011, p. 88–110, with changes).

**COMMISION DELEGATED DIRECTIVE (EU) 2015/863 of 31 March 2015** amending Annex II to Directive 2011/65/EU of the European Parliament and of the Council as regards the list of restricted substances.

**DIRECTIVE (EU) 2017/2102 OF THE EUROPEAN PARLIAMENT AND OF THE COUNCIL of 15 November 2017** amending Directive 2011/65/EU on the restriction of the use of certain hazardous substances in electrical and electronic equipment.

### Exclusion of liability in the event of damage to data contained on disks or other devices or media:

The manufacturer is not liable in the event of damage or loss of data contained on disks or other devices or carriers during the operation of the Product.

# Obligation to consult the Manufacturer before performing any action not provided for in the instruction manual or other documents:

Before performing an action that is not provided for a given Product in the user manual, other documents attached to the Product or does not result from the normal purpose of the Product, it is necessary, under pain of exclusion of the Manufacturer's liability for the consequences of such action, to contact the Manufacturer.



Pictures in this publication showing camera views can be simulations. Actual camera images may vary depending on the type, model, settings, observation area, or environmental conditions.

### IMPORTANT SAFEGUARDS AND WARNINGS

Before using the device, read the instruction manual in order to ensure proper and safe operation of the device. Failure to comply with the instructions may lead to damage to the device and/or safety violations.

The user may not repair the device himself. Repairs and maintenance of the device may only be performed by qualified service personnel.



The device, which is an element of a professional CCTV system used for supervision and control, is not intended for self-assembly in households by persons without specialist knowledge.

- 1. Please read this manual carefully before installation and operation;
- 2. Please keep this manual for the lifespan of the device in case referring to the contents of this manual is necessary;
- 3. It is necessary to comply with the safety requirements described in the manual, as they have a direct impact on the safety of users and the durability and reliability of the device;
- 4. All activities performed by installers and users must be carried out as described in the manual;
- 5. The device should be disconnected from power sources during maintenance procedures;
- 6. It is not allowed to use any additional devices, components or accessories not provided for and not recommended by the manufacturer;
- 7. Do not install this device in places where proper ventilation cannot be provided (e.g. closed cabinets, etc.), as this may cause heat build-up and may result in damage;
- 8. Do not place the device on unstable surfaces. Installation must be carried out by qualified personnel with appropriate permissions in accordance with the recommendations provided in this manual;
- 9. The device may be powered only from sources with parameters compliant with those indicated by the manufacturer in the technical data;

As the product is constantly improved and optimised, some of its parameters and functions may have changed from those described in this manual. If in doubt, please refer to the user manual at **www.novuscctv.com** 

The user manual located at www.novuscctv.com is always the most up-to-date version.

# FOREWORD INFORMATION

### **1. TECHNICAL SPECIFICATION**

IMAGE	
Image Sensor	4 MPX CMOS sensor 1/3" SmartSens
Number of Effective Pixels	2568 (H) x 1448 (V)
Min. Illumination	0.01 lx/F2.1 - color mode,
Electronic Chutter	0 Ix (IR on) - B/W mode
	auto: 1/3 \$* 1/100000 \$
Digital Slow Shutter (DSS)	up to 1/3 s
Wide Dynamic Range (WDR)	yes
Digital Noise Reduction (DNR)	2D, 3D
Highlight Compensation (HLC)	yes
Back Light Compensation (BLC)	yes
Reduction of image flicker (Antiflicker)	yes
LENS	
Lens Type	fixed focal, f=2.1 mm/F2.1
DAY/NIGHT	
Switching Type	mechanical IR cut filter
Switching Mode	auto, manual, time
Switching Level Adjustment	yes
Switching Delay	2 ~ 6000 s
Mailela Lielet Company	Voc
visible Light Sensor	yes
NETWORK	yes
NETWORK           Stream Resolution	2560 x 1440 (QHD), 2304 x 1296, 1920 x 1080 (Full HD),
Visible Light Sensor       NETWORK       Stream Resolution	yes 2560 x 1440 (QHD), 2304 x 1296, 1920 x 1080 (Full HD), 1280 x 720 (HD), 704 x 576, 352 x 288 (CIF), 480 x 240
NETWORK       Stream Resolution       Frame Rate	yes 2560 x 1440 (QHD), 2304 x 1296, 1920 x 1080 (Full HD), 1280 x 720 (HD), 704 x 576, 352 x 288 (CIF), 480 x 240 30 fps for each resolution
Visible Light Sensor       NETWORK       Stream Resolution       Frame Rate       Multistreaming Mode	yes 2560 x 1440 (QHD), 2304 x 1296, 1920 x 1080 (Full HD), 1280 x 720 (HD), 704 x 576, 352 x 288 (CIF), 480 x 240 30 fps for each resolution 2 streams (main stream, sub stream)
Visible Light Sensor         NETWORK         Stream Resolution         Frame Rate         Multistreaming Mode         Video/Audio Compression	yes 2560 x 1440 (QHD), 2304 x 1296, 1920 x 1080 (Full HD), 1280 x 720 (HD), 704 x 576, 352 x 288 (CIF), 480 x 240 30 fps for each resolution 2 streams (main stream, sub stream) H.264, H.265, MJPEG/G.711
Visible Light Sensor         NETWORK         Stream Resolution         Frame Rate         Multistreaming Mode         Video/Audio Compression         Number of Simultaneous Connections	yes 2560 x 1440 (QHD), 2304 x 1296, 1920 x 1080 (Full HD), 1280 x 720 (HD), 704 x 576, 352 x 288 (CIF), 480 x 240 30 fps for each resolution 2 streams (main stream, sub stream) H.264, H.265, MJPEG/G.711 max. 2
Visible Light Sensor         NETWORK         Stream Resolution         Frame Rate         Multistreaming Mode         Video/Audio Compression         Number of Simultaneous Connections         Bandwidth	yes 2560 x 1440 (QHD), 2304 x 1296, 1920 x 1080 (Full HD), 1280 x 720 (HD), 704 x 576, 352 x 288 (CIF), 480 x 240 30 fps for each resolution 2 streams (main stream, sub stream) H.264, H.265, MJPEG/G.711 max. 2 12 Mb/s in total
Visible Light Sensor         NETWORK         Stream Resolution         Frame Rate         Multistreaming Mode         Video/Audio Compression         Number of Simultaneous Connections         Bandwidth         Network Protocols Support	yes 2560 x 1440 (QHD), 2304 x 1296, 1920 x 1080 (Full HD), 1280 x 720 (HD), 704 x 576, 352 x 288 (CIF), 480 x 240 30 fps for each resolution 2 streams (main stream, sub stream) H.264, H.265, MJPEG/G.711 max. 2 12 Mb/s in total HTTP, IPv4/v6, UDP, HTTPS, FTP, DHCP, DDNS, NTP, RTSP, UPnP, QoS, IEEE 802.1X, PPPOE, SMTP, P2P, RTMP
Visible Light Sensor         NETWORK         Stream Resolution         Frame Rate         Multistreaming Mode         Video/Audio Compression         Number of Simultaneous Connections         Bandwidth         Network Protocols Support         Camera Configuration	yes 2560 x 1440 (QHD), 2304 x 1296, 1920 x 1080 (Full HD), 1280 x 720 (HD), 704 x 576, 352 x 288 (CIF), 480 x 240 30 fps for each resolution 2 streams (main stream, sub stream) H.264, H.265, MJPEG/G.711 max. 2 12 Mb/s in total HTTP, IPv4/v6, UDP, HTTPS, FTP, DHCP, DDNS, NTP, RTSP, UPnP, QoS, IEEE 802.1X, PPPoE, SMTP, P2P, RTMP from Edge, Firefox, Chrome, Opera browser languages: Polish, English, Russian, and others
Visible Light Sensor         NETWORK         Stream Resolution         Frame Rate         Multistreaming Mode         Video/Audio Compression         Number of Simultaneous Connections         Bandwidth         Network Protocols Support         Camera Configuration         Compatible Software	yes 2560 x 1440 (QHD), 2304 x 1296, 1920 x 1080 (Full HD), 1280 x 720 (HD), 704 x 576, 352 x 288 (CIF), 480 x 240 30 fps for each resolution 2 streams (main stream, sub stream) H.264, H.265, MJPEG/G.711 max. 2 12 Mb/s in total HTTP, IPv4/v6, UDP, HTTPS, FTP, DHCP, DDNS, NTP, RTSP, UPnP, QoS, IEEE 802.1X, PPPoE, SMTP, P2P, RTMP from Edge, Firefox, Chrome, Opera browser languages: Polish, English, Russian, and others NOVUS MANAGEMENT SYSTEM VSS, NOVUS MANAGEMENT SYSTEM AC
Visible Light Sensor         NETWORK         Stream Resolution         Frame Rate         Multistreaming Mode         Video/Audio Compression         Number of Simultaneous Connections         Bandwidth         Network Protocols Support         Camera Configuration         Compatible Software         Mobile applications	yes 2560 x 1440 (QHD), 2304 x 1296, 1920 x 1080 (Full HD), 1280 x 720 (HD), 704 x 576, 352 x 288 (CIF), 480 x 240 30 fps for each resolution 2 streams (main stream, sub stream) H.264, H.265, MJPEG/G.711 max. 2 12 Mb/s in total HTTP, IPv4/v6, UDP, HTTPS, FTP, DHCP, DDNS, NTP, RTSP, UPnP, QoS, IEEE 802.1X, PPPoE, SMTP, P2P, RTMP from Edge, Firefox, Chrome, Opera browser languages: Polish, English, Russian, and others NOVUS MANAGEMENT SYSTEM VSS, NOVUS MANAGEMENT SYSTEM AC N-VID6 (iPhone, Android)
Visible Light Sensor         NETWORK         Stream Resolution         Frame Rate         Multistreaming Mode         Video/Audio Compression         Number of Simultaneous Connections         Bandwidth         Network Protocols Support         Camera Configuration         Compatible Software         Mobile applications	yes 2560 x 1440 (QHD), 2304 x 1296, 1920 x 1080 (Full HD), 1280 x 720 (HD), 704 x 576, 352 x 288 (CIF), 480 x 240 30 fps for each resolution 2 streams (main stream, sub stream) H.264, H.265, MJPEG/G.711 max. 2 12 Mb/s in total HTTP, IPv4/v6, UDP, HTTPS, FTP, DHCP, DDNS, NTP, RTSP, UPnP, QoS, IEEE 802.1X, PPPOE, SMTP, P2P, RTMP from Edge, Firefox, Chrome, Opera browser languages: Polish, English, Russian, and others NOVUS MANAGEMENT SYSTEM VSS, NOVUS MANAGEMENT SYSTEM AC N-VID6 (iPhone, Android)
Visible Light Sensor         NETWORK         Stream Resolution         Frame Rate         Multistreaming Mode         Video/Audio Compression         Number of Simultaneous Connections         Bandwidth         Network Protocols Support         Camera Configuration         Compatible Software         Mobile applications         WIFI         Network standard	yes 2560 x 1440 (QHD), 2304 x 1296, 1920 x 1080 (Full HD), 1280 x 720 (HD), 704 x 576, 352 x 288 (CIF), 480 x 240 30 fps for each resolution 2 streams (main stream, sub stream) H.264, H.265, MJPEG/G.711 max. 2 12 Mb/s in total HTTP, IPv4/v6, UDP, HTTPS, FTP, DHCP, DDNS, NTP, RTSP, UPnP, QoS, IEEE 802.1X, PPPoE, SMTP, P2P, RTMP from Edge, Firefox, Chrome, Opera browser languages: Polish, English, Russian, and others NOVUS MANAGEMENT SYSTEM VSS, NOVUS MANAGEMENT SYSTEM AC N-VID6 (iPhone, Android) IEEE802.11b, g, n
Visible Light Sensor         NETWORK         Stream Resolution         Frame Rate         Multistreaming Mode         Video/Audio Compression         Number of Simultaneous Connections         Bandwidth         Network Protocols Support         Camera Configuration         Compatible Software         Mobile applications         WIFI         Network standard         Band	yes 2560 x 1440 (QHD), 2304 x 1296, 1920 x 1080 (Full HD), 1280 x 720 (HD), 704 x 576, 352 x 288 (CIF), 480 x 240 30 fps for each resolution 2 streams (main stream, sub stream) H.264, H.265, MJPEG/G.711 max. 2 12 Mb/s in total HTTP, IPv4/v6, UDP, HTTPS, FTP, DHCP, DDNS, NTP, RTSP, UPnP, QoS, IEEE 802.1X, PPPoE, SMTP, P2P, RTMP from Edge, Firefox, Chrome, Opera browser languages: Polish, English, Russian, and others NOVUS MANAGEMENT SYSTEM VSS, NOVUS MANAGEMENT SYSTEM AC N-VID6 (iPhone, Android) IEEE802.11b, g, n 2.4GHz
Visible Light Sensor         NETWORK         Stream Resolution         Frame Rate         Multistreaming Mode         Video/Audio Compression         Number of Simultaneous Connections         Bandwidth         Network Protocols Support         Camera Configuration         Compatible Software         Mobile applications         WIFI         Network standard         Band         Security	yes 2560 x 1440 (QHD), 2304 x 1296, 1920 x 1080 (Full HD), 1280 x 720 (HD), 704 x 576, 352 x 288 (CIF), 480 x 240 30 fps for each resolution 2 streams (main stream, sub stream) H.264, H.265, MJPEG/G.711 max. 2 12 Mb/s in total HTTP, IPv4/v6, UDP, HTTPS, FTP, DHCP, DDNS, NTP, RTSP, UPnP, QoS, IEEE 802.1X, PPPoE, SMTP, P2P, RTMP from Edge, Firefox, Chrome, Opera browser languages: Polish, English, Russian, and others NOVUS MANAGEMENT SYSTEM VSS, NOVUS MANAGEMENT SYSTEM AC N-VID6 (iPhone, Android) IEEE802.11b, g, n 2.4GHz WEP, WPA-PSK/WPA2-PSK
Visible Light Sensor         NETWORK         Stream Resolution         Frame Rate         Multistreaming Mode         Video/Audio Compression         Number of Simultaneous Connections         Bandwidth         Network Protocols Support         Camera Configuration         Compatible Software         Mobile applications         WIFI         Network standard         Band         Security         Transmission range	yes 2560 x 1440 (QHD), 2304 x 1296, 1920 x 1080 (Full HD), 1280 x 720 (HD), 704 x 576, 352 x 288 (CIF), 480 x 240 30 fps for each resolution 2 streams (main stream, sub stream) H.264, H.265, MJPEG/G.711 max. 2 12 Mb/s in total HTTP, IPv4/v6, UDP, HTTPS, FTP, DHCP, DDNS, NTP, RTSP, UPnP, QoS, IEEE 802.1X, PPPoE, SMTP, P2P, RTMP from Edge, Firefox, Chrome, Opera browser languages: Polish, English, Russian, and others NOVUS MANAGEMENT SYSTEM VSS, NOVUS MANAGEMENT SYSTEM AC N-VID6 (iPhone, Android) IEEE802.11b, g, n 2.4GHz WEP, WPA-PSK/WPA2-PSK up to 50 m
NETWORK         Stream Resolution         Frame Rate         Multistreaming Mode         Video/Audio Compression         Number of Simultaneous Connections         Bandwidth         Network Protocols Support         Camera Configuration         Compatible Software         Mobile applications         WIFI         Network standard         Band         Security         Transmission range         Antenna	yes 2560 x 1440 (QHD), 2304 x 1296, 1920 x 1080 (Full HD), 1280 x 720 (HD), 704 x 576, 352 x 288 (CIF), 480 x 240 30 fps for each resolution 2 streams (main stream, sub stream) H.264, H.265, MJPEG/G.711 max. 2 12 Mb/s in total HTTP, IPv4/v6, UDP, HTTPS, FTP, DHCP, DDNS, NTP, RTSP, UPnP, QoS, IEEE 802.1X, PPPOE, SMTP, P2P, RTMP from Edge, Firefox, Chrome, Opera browser languages: Polish, English, Russian, and others NOVUS MANAGEMENT SYSTEM VSS, NOVUS MANAGEMENT SYSTEM AC N-VID6 (iPhone, Android) IEEE802.11b, g, n 2.4GHz WEP, WPA-PSK/WPA2-PSK up to 50 m built-in, omnidirectional

# FOREWORD INFORMATION

OTHERFUNCTIONS	
Security	IEEE 802.1X support, HTTPS support, MAC/IP address filtering, force change of default password
Privacy Zones	4 video mask type: single color
Motion Detection	yes
PIR detector	range up to 5 m
Region of interest (ROI)	8
Video Content Analysis (VCA)	tamper, pedestrian detection
Image Processing	mirror effect, vertical flip, horizontal flip
Prealarm/Postalarm	up to 6 s/up to 120 s
System Reaction to Alarm Events	e-mail with attachment, saving file on FTP server, saving file on SD card, alarm output activation, playback of the audio message
Restoring default settings	via web browser, using reset button, via NMS IPTool software
IR LED	
LED Number	1
Range	10 m
Smart IR	yes (hardware support)
INTERFACES	
Audio Input/Output	built-in microphone/speaker
Alarm Input/Output	1 (NO/NC)/1 relay type (max. 12VDC/300mA)
Network Interface	1 x Ethernet - RJ-45 interface, 10/100 Mbit/s Wireless (WiFi)
Memory Card Slot	microSD - capacity up to 128GB
INSTALLATION PARAMETERS	
Dimensions (mm)	63 (W) x 109 (H) x 27 (L) with bracket: 72 (W) x 130 (H) x 72 (L)
Weight	0.2 kg
Enclosure	plastic, black and white, wall mount/base in-set included
Power Supply	12 VDC, PoE (IEEE 802.3af, Class 3)
Power Consumption	3 W, 4 W (IR illuminator on)
Operating Temperature	-20°C ~ 50°C
Humidity	max. 95%, relative (non-condensing)



The declared range of the WiFi network is based on laboratory research and relates to open spaces. It should be noted, that the materials used for the construction of houses and flats, wall thickness and electromagnetic field conditions in the immediate surroundings may affect the range of the network.

All rights reserved © AAT SYSTEMY BEZPIECZEŃSTWA SP. Z O.O.

### 1.1. Camera dimensions



### 1.2. Package contents

After you open the package make sure that the following elements are inside:

- IP camera
- Accessories bag
- Quick start guide

If any of this elements has been damaged during transport, pack all the elements back into the original box and contact your supplier for further assistance.

### **Caution:**

If the device was brought from a location with lower temperature, please wait until it reaches the temperature of location it is currently in. Turning the device on immediately after bringing it from a location with lower ambient temperature is forbidden, as the condensing water vapour may cause short-circuits and damage the device as a result.

### **Caution:**

Before starting the device familiarize yourself with the description and the role of particular inputs, outputs and adjusting elements that the device is equipped with.

### 2. START-UP AND INITIAL CONFIGURATION

2.1. Description of camera components and connectors



1	Lens	8	Speaker
2	IR LED (infrared illuminator)	9	Alarm input/output connectors
3	Microphone	10	12VDC power socket
4	PIR detector	11	RESET button
5	Status light	12	Memory card slot
6	Light sensor	13	Camera position adjustment
7	LAN socket	14	Base

# **Status Light Options**

Red, solid	Starting	Red, flashing	Network disconnected
Blue, solid	Setting up WiFi connection	Blue, flashing	Alarm
Green, solid	Working	Green, flashing	Firmware update

All rights reserved © AAT SYSTEMY BEZPIECZEŃSTWA SP. Z O.O.

### 2.2. Power supply connection

The camera can be powered from AC or DC power supplies available on the market, provided that it meets the technical requirements of the camera. The power supply must provide a stabilized DC voltage of 24V, must allow for the consumption of at least 10W of power, and must have a DC 2.5/5.5 cylindrical power plug with the correct polarity of the contacts:



It is also possible to power the camera via the RJ45 network socket, using PoE technology (IEEE 802.3af, Class 3).

#### Caution!

Do not use power supplies and POE adapters that do not comply with the IEEE 802.3af standard, the so-called "passive POE" power supplies. Damage resulting from the use of an unsuitable adapter is not covered by the warranty!

### 2.3. Connection of alarm input/output

The camera has one alarm input and output. The alarm input is used to connect a device such as a motion detector, button, reed switch or photocell. Violation of the input will trigger the alarm and activate the previously programmed action.

The alarm output enables connection of an external siren and implementation of automatic control functions, such as switching on light.



Connecting the alarm input



All rights reserved © AAT SYSTEMY BEZPIECZEŃSTWA SP. Z O.O.

### 2.4. Camera mounting

The camera design allows flexible selection of the place of attachment / installation. The camera can work when placed on any flat surface or be hung using mounting holes in the foot.

To mount the camera in a hanging position, we recommend you follow the following guidelines:

- Place the template where you want to install the camera. Then drill the holes according to the template.
- Insert the dowels into the holes and tighten the screws. The screws should protrude a few millimeters above the wall surface.
- Route and connect the cables to the camera.
- Hang the camera by the mounting base on the screws and make sure it is securely fastened. Then adjust the camera position.

### **Caution:**

1

The camera is designed for indoor use in living quarters. Using it outdoors, or in rooms with high humidity such as swimming pools, bathrooms, laundries, etc. may cause the camera to malfunction or damage.

9

### 2.5. Starting the camera

### 2.5.1 Starting with connecting the camera to a wired LAN network

To start the camera, connect the Ethernet cable to the camera's network socket, and the other end to the switch or router. If your switch or router is not a PoE device, you should also connect a 12VDC power supply to the camera. The following schemes may help:

• Wired connection using a PoE switch or router:



Wired connection using a switch or router without PoE and 12VDC power supply:



After making connections and starting the camera (which takes about 2 minutes) it is possible to connect to the camera.

After entering the default address in the browser's address bar, wait for the login page to appear.

The default network address of the camera is: 192.168.1.200, subnet mask: 255.255.255.0

If the page does not appear and the browser displays a connection error message, you should use the "IP Tool 6000" tool, which allows you to search for IP cameras on the network, as well as manage and configure them. The tool can be downloaded from the product page at *www.novuscctv.com*.

Once the tool has found the camera, enter the camera's IP address in the browser's address bar (or double-click on its name) to go to the login page.

i

### 2.5.2 Starting with connecting the camera to a WiFi network

To start the camera with a WiFi connection, you need to have a mobile device (smartphone, tablet). Before starting the operation, make sure that the mobile device is connected to the WiFi network.

First, download the **N-VID6** application to your mobile device (from the Play Store for Android devices or the Apple Store for iOS devices). After installing the application, log in (or create an account).

Then go to the "Devices" tab and tap the add button in the upper right corner of the screen, then the "Add" option. A QR code scanning window will open, which you should use to scan the code located on the camera base. After successful scanning, the device adding window will open. Now tap the "Add" button and connect the 12VDC power supply to the camera.

Do not connect an RJ45 network cable. Connecting a network cable disables the WiFi network.

Then wait until the status light on the camera is solid blue and confirm this on your mobile device and tap the "Next Step" button.



In the next window, enter the WiFi network password and tap the "Next Step" button, and in the next step confirm the connection to the camera being added.



At this stage, the camera is activated. The mobile device connects to the hotspot created by the camera to set the user password.

After connecting to the camera hotspot, in the next window you need to enter and confirm the camera login password for the administrator account (root).

< Device Activation	n	
Please set a password for root use	er	
	8	
······	⊗	
1. The password length is 8-16 cha 2. contains numbers/lowercase le uppercase letters/symbols.	aracters. tters/	

After a while, the camera will turn off the hotspot and connect to the WiFi network. It will be possible to search for this camera and connect to it via devices on the same network. After a while, the N-VID6 application on the mobile device will restart and after restarting, the camera will be added to the application

All rights reserved © AAT SYSTEMY BEZPIECZEŃSTWA SP. Z O.O.

### 2.6. Security recommendations for network architecture and configuration

### WARNING!

Below are shown security recommendations for network architecture and configuration of CCTV systems that are connected to the Internet to reduce the risk of unauthorized interference with the system by a third party.

1. Absolutely change the default passwords and user names (if the device gives this possibility) of all applied network devices (recorders, cameras, routers, network switches, etc.) to the severely complexity password. Use lowercase and uppercase letters, numbers, and special characters if there is such possibility.

2. Depending on the available functionality in the order to restrict access to the used network devices at the administrator account level, it is recommended to configure the users accounts accordingly.

3. Do not use DMZ function (Demilitarized zone) in your router. Using that function you open the access to recorder system from the Internet on all ports, which gives possibility for an unauthorized interference with the system.

Instead of DMZ use port forwarding redirect only the ports which are necessary for the performance of the connection (detailed information about ports of communication in different models of recorders, cameras, etc. can be found in the operating instructions).

4. Use routers with firewall function and make sure it is enabled and properly configured.

5. It is recommended to change the default network communication port numbers of used devices if there is such possibility.

6. If used network devices has a UPnP feature and it is not used, turn it off.

7. If used network devices has a P2P feature and it is not used, turn it off.

8. If used network devices support HTTPS protocol for connection, it is recommended to use it.

9. If used network devices support IP filtering for authorized connections function, it is recommended to use it.

# NETWORK CONNECTION UTILIZING WEB BROWSER

### **3. NETWORK CONNECTION UTILIZING WEB BROSWER**

### 3.1. First connection to the camera

1

Enter the camera's IP address in the address bar of your web browser. Once connected, a privacy statement window will appear, which you must accept by checking the checkbox and pressing the "Read" button. Then the camera will display the time zone configuration windows, and then the activation window, where you define the administrator password (and the password for the ONVIF account). The next window is a window for selecting security questions, allowing you to regain access to the camera if you forget the administrator password, without having to reset the device. After completing these steps, the camera will restart and display the login screen, where you must enter the administrator account name (root by default) and the set password.

If we are working in the Edge browser switched to Internet Explorer mode, the browser may ask to install the NetAIIPCamera add-on, which is necessary for the correct display of the menu and camera image. The lack of the correct add-in is indicated by the following message:

The plugin is not installed or the version needs to be updated, please click <u>Here</u> to download and install. Before installation, please close your browser.

Click on the "Here" link to start downloading the add-on, then use your browser dialog to install it.

In the window, click the Run button, and then follow the instructions of the installer.

Do you want to run or save NetAIIPCamera.exe from 192.168.41.207?		×
This type of file could harm your computer.	Run	Save   Cancel

When using a browser that uses the HTML5 protocol (like Firefox, Chrome, Opera, Safari) there is no need to install any add-ons and after logging in, the image will be displayed in the live preview window.

13

# **USING AND CONFIGURING**

### **3.2. Remote view window**

The view below shows the remote viewing window displayed in the Edge browser switched to Internet Explorer mode, with the "NetAIIPCamera" add-on installed. When connecting to the camera from browsers that use HTML5, some menu items and/or options may be unavailable or limited. This is not a defect, but results from the specificity of the HTML5 standard.



- 1. Selection of the stream to be displayed in the preview window and set the buffer size of the camera.
- 2. Camera operation mode selection and configuration buttons:

Live	- enables the live stream preview
Config	- displays the camera configuration panel
Search	- displays the panel for searching and playing back recordings from the memory card
root	- information about the logged in user
Logout	- logs out of the camera

(i)

# **RESTORE FACTORY SETTINGS**

3. Alarm event icons display panel:



From left to right: alarm output activation, memory card recording, color change, sabotage, scene change, people detection, PIR detection, alarm input alarm, motion detection alarm. The occurrence of a given event is signaled by a flashing red color.

4. Image adjusting buttons:



From left to right: original size, original aspect ratio, automatic window fit, full screen.

5. Live view window.

Double-clicking the left mouse button on the preview window turns the display of the image on and off in full screen.

6. Buttons for controlling camera functions:



From left to right: enables/disables live view, enables and disables the alarm output, turns on twoway audio, turns on audio monitoring, takes a photo, enables/disables recording, digital zoom buttons, enables/disables the display of image analysis lines

### **5. RESTORE FACTORY SETTINGS**

### 5.1 Software restore of factory settings

The restore of factory settings function is located in the "Config -> Maintenance -> Backup and Restore" menu. You can choose the "Restore default parameters" option, where selecting the "Keep" option allows you to keep the network settings, security configuration or image configuration unchanged. This option does not reset user passwords. The "Restore factory settings" option completely resets all camera settings.

### 5.2 Hardware restore of factory settings

To restore the camera's factory settings using the hardware, use the RESET button located on the rear panel. To restore the default settings using the RESET button, press and hold it for about 5 seconds.



# AAT SYSTEMY BEZPIECZEŃSTWA Sp. z o.o. 431 Pulawska St., 02-801 Warsaw, Poland

431 Pulawska St., 02-801 Warsaw, Poland tel.: +4822 546 0 546, kontakt@aat.pl www.novuscctv.com

# Skrócona instrukcja obsługi



# NVIP-4Q-6101/PIR/W



# UWAGI I OSTRZEŻENIA

### PRODUKT SPEŁNIA WYMAGANIA ZAWARTE W DYREKTYWACH:

**EXAMPLANTENTU EUROPEJSKIEGO I RADY 2014/30/UE z dnia 26 lutego 2014 r.** w sprawie harmonizacji ustawodawstw państw członkowskich odnoszących się do kompatybilności elektromagnetycznej (Dz.U. L 096 z 29.3.2014, s. 79-106, z późniejszymi zmianami) – zwana Dyrektywą EMC.



**DYREKTYWA PARLAMENTU EUROPEJSKIEGO I RADY 2012/19/UE z dnia** 4 lipca 2012 r. w sprawie zużytego sprzętu elektrycznego i elektronicznego WEEE (Dz.U. L 96 z 29.3.2014, str. 79-106, z późniejszymi zmianami) – zwana Dyrektywą WEEE.



**DYREKTYWA PARLAMENTU EUROPEJSKIEGO I RADY 2011/65/UE z dnia 8 czerwca 2011 r.** w sprawie ograniczenia stosowania niektórych niebezpiecznych substancji w sprzęcie elektrycznym i elektronicznym (Dz.U. L 174 z 1.7.2011, str. 88-110, z późniejszymi zmianami) - zwana Dyrektywą RoHS.

**DYREKTYWA DELEGOWANA KOMISJI (UE) 2015/863 z dnia 31 marca 2015 r.** zmieniająca załącznik II do dyrektywy Parlamentu Europejskiego i Rady 011/65/UE w odniesieniu do wykazu substancji objętych ograniczeniem (Dz. U. z 3 stycznia 2017).

**DYREKTYWA PARLAMENTU EUROPEJSKIEGO I RADY (UE) 2017/2102 z dnia 15 listopada 2017 r.** zmieniająca dyrektywę 2011/65/UE w sprawie ograniczenia stosowania niektórych niebezpiecznych substancji w sprzęcie elektrycznym i elektronicznym (Dz. U. z 10 lipca 2019).

# Wyłączenie odpowiedzialności w przypadku uszkodzenia danych zawartych na dyskach lub innych urządzeniach lub nośnikach:

Producent nie ponosi odpowiedzialności w razie uszkodzenia lub utraty w trakcie eksploatacji Produktu danych zawartych na dyskach lub innych urządzeniach lub nośnikach.

# Obowiązek konsultowania się z Producentem przed wykonaniem czynności nieprzewidzianej instrukcją obsługi albo innymi dokumentami:

Przed wykonaniem czynności, która nie jest przewidziana dla danego Produktu w instrukcji obsługi, innych dokumentach dołączonych do Produktu lub nie wynika ze zwykłego przeznaczenia Produktu, należy, pod rygorem wyłączenia odpowiedzialności Producenta za następstwa takiej czynności, skontaktować się z Producentem.



Zamieszczone w niniejszej publikacji zdjęcia przedstawiające obrazy z kamer mogą być symulacjami. Rzeczywiste obrazy z kamer mogą się różnić, w zależności od typu, modelu, ustawień, obszaru obserwacji lub warunków zewnętrznych.

# WARUNKI BEZPIECZEŃSTWA

Przed rozpoczęciem użytkowania urządzenia, należy zapoznać się z instrukcją obsługi w celu zapewnienia właściwej i bezpiecznej pracy urządzenia. Nieprzestrzeganie instrukcji może prowadzić do uszkodzenia urządzenia i/lub naruszenia bezpieczeństwa użytkowania.

Użytkownik nie może dokonywać samodzielnych napraw urządzenia. Naprawy i konserwację urządzenia mogą być wykonywane wyłącznie przez wykwalifikowanych pracowników serwisu.



Urządzenie będące elementem profesjonalnego systemu telewizji dozorowej służącego do nadzoru i kontroli, nie jest przeznaczone do samodzielnego montażu w gospodarstwach domowych, przez osoby nie posiadające specjalistycznej wiedzy.

- 1. Przed zainstalowaniem i rozpoczęciem eksploatacji należy dokładnie zapoznać się z niniejszą instrukcją obsługi;
- 2. Instrukcję należy przechowywać przez czas eksploatacji urządzenia na wypadek konieczności odniesienia się do zawartych w niej treści;
- 3. Należy przestrzegać wymogów bezpieczeństwa opisanych w instrukcji, gdyż mają one bezpośredni wpływ na bezpieczeństwo użytkowników i trwałość oraz niezawodność urządzenia;
- 4. Wszystkie czynności wykonywane przez instalatorów i użytkowników muszą być realizowane zgodnie z opisem zawartym w instrukcji;
- 5. Podczas przeprowadzania czynności konserwatorskich urządzenie musi być odłączone od zasilania;
- 6. Nie wolno stosować żadnych dodatkowych urządzeń, podzespołów lub akcesoriów nie przewidzianych i nie zalecanych przez producenta;
- 7. Nie należy instalować tego urządzenia w miejscach, gdzie nie można zapewnić właściwej wentylacji (np. zamknięte szafki, itp.), gdyż może to powodować kumulowanie się ciepła i w konsekwencji może doprowadzić do uszkodzenia;
- 8. Nie wolno umieszczać urządzenia na niestabilnych powierzchniach. Instalacja musi być przeprowadzona przez wykwalifikowany personel o odpowiednich uprawnieniach według zaleceń podanych w niniejszej instrukcji;
- 9. Urządzenie może być zasilane jedynie ze źródeł o parametrach zgodnych ze wskazanymi przez producenta w danych technicznych;



Ponieważ produkt jest stale ulepszany i optymalizowany, niektóre jego parametry i funkcje mogły ulec zmianie w stosunku do opisanych w niniejszej instrukcji. W razie wątpliwości prosimy o zapoznanie się z instrukcją obsługi znajdującą się na stronie **www.novuscctv.com** 

Instrukcja obsługi znajdującą się na stronie www.novuscctv.com jest zawsze najbardziej aktualną wersją.

pl

# INFORMACJE WSTĘPNE

### **1. DANE TECHNICZNE**

OBRAZ	
Przetwornik obrazu	4 MPX, matryca CMOS, 1/3", SmartSens
Liczba efektywnych pikseli	2568 (H) x 1448 (V)
Czułość	0.01 lx/F2.1 - tryb kolorowy,
	0 lx (IR wł.) - tryb czarno-biały
Elektroniczna migawka	automatyczna: 1/3 s ~ 1/100000 s
Wydłużona migawka (DSS)	do 1/3 s
Szeroki zakres dynamiki (WDR)	tak
Cyfrowa redukcja szumu (DNR)	2D, 3D
Redukcja efektu oślepienia kamery (HLC)	tak
Kompensacja tylnego światła (BLC)	tak
Redukcja migotania obrazu (Antiflicker)	tak
OBIEKTYW	
Typ obiektywu	stałoogniskowy, f=2.1 mm/F2.1
DZIEŃ/NOC	
Rodzaj przełączania	mechaniczny filtr podczerwieni
Tryb przełączania	automatyczny, manualny, czasowy
Regulacja poziomu przełączania	tak
Opóźnienie przełączania	2 ~ 6000 s
Czujnik światła widzialnego	tak
SIEĆ	
Rozdzielczość strumienia wideo	2560 x 1440 (QHD), 2304 x 1296, 1920 x 1080 (Full HD),
Prodkość przetwarzania	1280 X /20 (HD), /04 X 576, 352 X 288 (CIF), 480 X 240
Kompresja wideo/audio	H.264, H.265, MJPEG / G.711
Liczba jednoczesnych połączen	maks. 2
Przepustowość	
Obsługiwane protokoły sieciowe	IEEE 802.1X, PPPoE, SMTP, P2P, RTMP
Konfiguracja kamery	z poziomu przeglądarki Edge, Firefox, Chrome, Opera iezyki: polski, angielski, rosviski, i inne
Kompatybilne oprogramowanie	NOVUS MANAGEMENT SYSTEM VSS, NOVUS MANAGEMENT SYSTEM
Aplikacje mobilne	N-VID6 (iPhone, Android)
WIFI	
Standard sieci	IEEE802.11b, g, n
Pasmo	2.4GHz
Zabezpieczenia	WEP, WPA-PSK/WPA2-PSK
Zasięg transmisji	do 50 m
Antena	wbudowana. dookólna

# INFORMACJE WSTĘPNE

POZOSTAŁE FUNKCJE	
Zahaznieczenia	obsługa IEEE 802.1X, obsługa HTTPS, filtrowanie adresów MAC/IP,
	wymuszenie zmiany hasła domyślnego
Strefy prywatności	4 typu kolor
Detekcja ruchu	tak
Detektor PIR	zasięg do 5 m
Obszar obserwacji (ROI)	8
Analiza obrazu	sabotaż, detekcja osób
Obróbka obrazu	odbicie lustrzane, przerzucenie obrazu w pionie, przerzucenie obrazu w poziomie
Prealarm/postalarm	do 6 s/do 120 s
Reakcja na zdarzenia alarmowe	e-mail z załącznikiem, zapis na FTP, zapis na kartę SD, aktywacja wyjścia alarmowego, odtworzenie komunikatu audio
Przywracanie ustawień fabrycznych	z poziomu przeglądarki internetowej, za pomocą przycisku reset, za pomocą oprogramowania NMS IPTool
OŚWIETLACZ IR	
Liczba LED	1
Zasięg	10 m
Smart IR	tak (wsparcie sprzętowe)
INTERFEJSY	
Wejścia/wyjścia audio	wbudowany mikrofon/głośnik
Wejścia/wyjścia alarmowe	1 (NO/NC) / 1 typu przekaźnik (maks. 12VDC/300mA)
Interfejs sieciowy	1 x Ethernet - złącze RJ-45, 10/100 Mbit/s Bezprzewodowy (WiFi)
Gniazdo kart pamięci	microSD - pojemność do 128GB
PARAMETRY INSTALACYJNE	
Wymiary (mm)	63 (szer.) x 109 (wys.) x 27 (dł.) z uchwytem: 72 (szer.) x 130 (wys.) x 72 (dł.)
Masa	0.2 kg
Obudowa	plastikowa, w kolorze czarno-białym, uchwyt ścienny/podstawa w zestawie
Zasilanie	12 VDC, PoE (IEEE 802.3af, Klasa 3)
Pobór mocy	3 W, 4 W (oświetlacz IR wł.)
Temperatura pracy	-20°C ~ 50°C
Wilgotność	maksymalnie 95%, względna (bez kondensacji)



Deklarowany zasięg działania sieci WiFi jest oparty na badaniach laboratoryjnych i dotyczy otwartych przestrzeni. Należy mieć na uwadze, że materiały wykorzystywane do budowy domów i mieszkań, grubość ścian i warunki pola elektromagnetycznego w najbliższym otoczeniu mogą mieć wpływ na ograniczenie zasięgu sieci.

Wszelkie prawa zastrzeżone © AAT SYSTEMY BEZPIECZEŃSTWA SP. Z O.O.

### **INFORMACJE WSTĘPNE**

### 1.1. Wymiary kamery



### 1.2. Zawartość opakowania

Po otwarciu należy upewnić się czy w opakowaniu znajdują się następujące elementy:

- Kamera IP
- Torebka z akcesoriami montażowymi
- Skrócona instrukcja obsługi.

Jeżeli którykolwiek z elementów został uszkodzony w transporcie, należy spakować zawartość z powrotem do oryginalnego opakowania i skontaktować się z dostawcą.

### Uwaga:

Jeżeli urządzenie przyniesione zostało z pomieszczenia o niższej temperaturze należy odczekać aż osiągnie temperaturę pomieszczenia, w którym ma pracować. Nie wolno włączać urządzenia bezpośrednio po przyniesieniu z chłodniejszego miejsca. Kondensacja zawartej w powietrzu pary wodnej może spowodować zwarcia i w konsekwencji uszkodzenie urządzenia.

### Uwaga:

Przed uruchomieniem urządzenia należy zapoznać się z opisem i rolą poszczególnych wejść, wyjść oraz elementów regulacyjnych, w które wyposażone jest kamera.

# 2. URUCHAMIANIE I WSTĘPNA KONFIGURACJA

### 2.1. Opis elementów i złącz kamery



1	Obiektyw	8	Głośnik
2	Dioda IR LED (oświetlacz podczerwieni)	9	Blok złącz wejść/wyjść alarmowych
3	Mikrofon	10	Gniazdo zasilania 12VDC
4	Detektor PIR	11	Przycisk RESET
5	Kontrolka stanu	12	Gniazdo karty pamięci
6	Czujnik światła	13	Regulacja położenia kamery
7	Gniazdo sieci LAN	14	Podstawa

### Opcje kontrolki stanu

Czerwona, ciągła	Uruchamianie	Czerwona, migająca	Sieć rozłączona
Niebieska, ciągła	Konfiguracja połączenia WiFi	Niebieska, migająca	Alarm
Zielona, ciągła	Praca	Zielona, migająca	Aktualizacja firmware

Wszelkie prawa zastrzeżone © AAT SYSTEMY BEZPIECZEŃSTWA SP. Z O.O.

### 2.2. Podłączenie zasilania

Kamerę można zasilić z dostępnego na rynku zasilacza prądu stałego, pod warunkiem spełnienia przez niego wymogów technicznych kamery. Zasilacz musi dostarczać stabilizowanego napięcia stałego o wartości 12V, musi pozwalać na pobór co najmniej 10W mocy, oraz posiadać wtyk zasilający walcowy DC 2.5/5.5 o właściwej polaryzacji styków:



Możliwe jest także zasilanie kamery przez gniazdo sieciowe RJ45, przy wykorzystaniu technologii PoE (IEEE 802.3af, Klasa 3).

Uwaga!

Zabronione jest stosowanie jako źródło zasilania kamery urządzeń (zasilacze, adaptery itp.) PoE niezgodnych ze standardem IEEE 802.3af, potocznie nazywanych "pasywne zasilacze PoE". Uszkodzenia wynikłe ze stosowania nieodpowiednich źródeł zasilana nie podlegają gwarancji.

### 2.3. Podłączenie wejść / alarmowych

Kamera posiada jedno wejście i wyjście alarmowe. Wejście alarmowe służy do podłączenia takiego urządzenia jak czujka ruchu, przycisk, kontaktron lub fotokomórka. Naruszenie wejścia powoduje wyzwolenie alarmu i aktywuje wcześniej zaprogramowaną akcję.

Wyjście alarmowe umożliwia podłączenie zewnętrznego sygnalizatora i realizacje funkcji automatycznego sterowania, takiej jak np. załączanie oświetlenia.



Podłączenie wejścia alarmowego



Wszelkie prawa zastrzeżone © AAT SYSTEMY BEZPIECZEŃSTWA SP. Z O.O.

### 2.4. Montaż kamery

Konstrukcja kamery umożliwia elastyczny wybór miejsca zamocowania/postawienia. Kamera może pracować postawiona na dowolnej płaskiej powierzchni lub być zawieszona z wykorzystaniem otworów montażowych w stopie.

Aby zamontować kamerę w pozycji wiszącej, zalecamy postępować wg poniższych wskazówek:

- Przyłóż szablon w miejscu, w którym chcesz zainstalować kamerę. Następnie wywierć otwory na śruby w ścianie zgodnie z szablonem.
- Włóż kołki w otwory i wkręć wkręty. Wkręty powinny wystawać ponad powierzchnię ściany na kilka milimetrów.
- Doprowadź i podłącz przewody do kamery.
- Zawieś kamerę za podstawę montażową na wkrętach i upewnij się, że jest pewnie zamocowana. Następnie wyreguluj położenie kamery.



Kamera jest przeznaczona do pracy wewnątrz pomieszczeń mieszkalnych. Użytkowanie jej na zewnątrz, bądź w pomieszczeniach o dużej wilgotności jak baseny, łazienki, pralnie itp. może być przyczyną nieprawidłowego działania kamery lub jej uszkodzenia.

### 2.5. Uruchomienie kamery

### 2.5.1 Uruchomienie z podłączeniem kamery do sieci przewodowej LAN

W celu uruchomienia kamery należy podłączyć kabel ethernetowy do gniazda sieciowego kamery, a drugi koniec do switcha lub routera. Jeżeli posiadany switch lub router nie jest urządzeniem PoE, do kamery należy także podłączyć zasilanie 12VDC. Pomocne mogą być poniższe schematy:

• Połączenie przewodowe wykorzystujące switch lub router PoE:



• Połączenie przewodowe wykorzystujące switch lub router bez PoE i zasilanie 12VDC:



Po wykonaniu podłączeń i uruchomieniu się kamery (co trwa do 2 minut) możliwe jest połączenie się z kamerą.

Po wpisaniu adresu domyślnego w pasku adresowym przeglądarki, należy poczekać na wyświetlenie się strony logowania.

Domyślny adres sieciowy kamery to: 192.168.1.200, maska podsieci: 255.255.255.0

Gdyby strona nie pojawiła się, a przeglądarka wyświetliła komunikat o błędzie połączenia, należy skorzystać z narzędzia "IP Tool 6000", pozwalającego na wyszukiwanie kamer IP w sieci, a także na zarządzanie nimi i ich konfigurację. Narzędzie można pobrać ze strony produktu na *www.novuscctv.com*.

Po wyszukaniu kamery przez narzędzie należy wpisać na pasku adresowym przeglądarki adres IP kamery (lub kliknąć dwukrotnie na jej nazwę), aby przejść do strony logowania.

Wszelkie prawa zastrzeżone © AAT SYSTEMY BEZPIECZEŃSTWA SP. Z O.O.

Ĭ

### 2.5.2 Uruchomienie z podłączeniem kamery do sieci WiFi

1

i

Do uruchomienia kamery z podłączeniem do sieci WiFi niezbędne jest posiadanie urządzenia mobilnego (smartfon, tablet). Przed rozpoczęciem operacji należy upewnić się, że urządzenie mobilne ma połączenie z siecią WiFi

W pierwszej kolejności należy pobrać na swoje urządzenie mobilne (ze sklepu Play dla urządzeń z systemem Android lub ze sklepu Apple Store dla urządzeń z systemem iOS) aplikację **N-VID6**. Po zainstalowaniu aplikacji należy zalogować się (lub założyć konto).

Następnie należy przejść do zakładki "Urządzenia" i dotknąć przycisk dodawania  $\bigcirc$  w prawym górnym rogu ekranu, a następnie opcję "Dodawanie". Otworzy się okno skanowania kodu QR, którym należy zeskanować kod umieszczony na podstawie kamery. Po pomyślnym zeskanowaniu otworzy się okno dodawania urządzenia. Teraz należy dotknąć przycisk "Dodaj" i podłączyć do kamery zasilanie 12VDC.

Nie należy podłączać kabla sieciowego RJ45. Podłączenie kabla sieciowego wyłącza sieć WiFi.

Następnie należy zaczekać, aż kontrolka stanu na kamerze będzie świeciła na niebiesko światłem ciągłym i na urządzeniu mobilnym potwierdzić ten fakt i dotknąć przycisku "Next Step".



W następnym oknie należy podać hasło do sieci WiFi i dotknąć przycisku "Next Step", a w kolejnym kroku należy potwierdzić połączenie z dodawaną kamerą.

Na tym etapie odbywa się aktywacja kamery. Urządzenie mobilne łączy się z hot-spotem uruchomionym przez kamerę, by było możliwe ustawienie hasła użytkownika.

Po połączeniem z hot-spotem kamery, w następnym oknie należy wpisać i potwierdzić hasło logowania do kamery dla konta administratora (**root**).

< Device Act	ivation	
Please set a password for re	oot user	
••••••	8	
••••••	۲	
<ol> <li>The password length is 8</li> <li>contains numbers/lowerd uppercase letters/symbols.</li> </ol>	-16 characters. case letters/	

Po chwili kamera wyłączy hot-spot i połączy się z siecią WiFi. Możliwe będzie wyszukanie tej kamery i połączenie się z nią przez urządzenia znajdujące się w tej samej sieci. Po chwili aplikacja N-VID6 na urządzeniu mobilnym zrestartuje się i po ponownym uruchomieniu kamera będzie dodana do aplikacji.

### 2.6. Zalecenia dotyczące bezpieczeństwa sieci

### UWAGA!

Poniżej zostały przedstawione podstawowe zalecenia dotyczące budowy oraz konfiguracji systemów monitoringu podłączonych do sieci Internet, pozwalające ograniczyć ryzyko nieautoryzowanej ingerencji w system przez osoby trzecie.

pl

1. Bezwzględnie należy zmienić domyślne hasła dostępu oraz nazwy użytkowników (jeśli dane urządzenia dają taką możliwość) wszystkich zastosowanych urządzeń sieciowych (tzn. kamery, routerów, przełączników sieciowych itp.) na hasła o znacznym stopniu skomplikowania. W zależności od możliwości konfiguracji danego urządzenia zaleca się, aby hasło zawierało: małe litery, wielkie litery, cyfry oraz znaki specjalne.

2. W zależności od dostępnej funkcjonalności w celu ograniczenia dostępu do zastosowanych urządzeń sieciowych na poziomie konta administratora zaleca się odpowiednią konfigurację kont użytkowników.

3. Bezwzględnie zabronione jest wykorzystywanie funkcji DMZ (Demilitarized zone - strefa zdemilitaryzowana). Zastosowanie tej funkcji otwiera dostęp do systemu od strony sieci Internet na wszystkich możliwych portach, co w znacznym stopniu ułatwia ewentualną nieautoryzowaną ingerencję w system.

Zamiast wykorzystywania funkcji DMZ należy zastosować przekierowanie portów. Przekierowane powinny zostać jedynie porty niezbędne do realizacji połączenia (szczegółowych informacji na temat portów komunikacji w poszczególnych modelach rejestratorów, kamer itp. należy szukać w instrukcjach obsługi urządzeń).

4. Należy stosować routery wyposażone w funkcję zapory sieciowej (Firewall) oraz upewnić się że funkcja jest włączona oraz odpowiednio skonfigurowana.

5. Jeśli urządzenia sieciowe posiadają taką funkcjonalność, zalecana jest zmiana domyślnych numerów portów wykorzystywanych do komunikacji sieciowej.

6. Jeśli urządzenia sieciowe posiadają funkcję UPnP i nie jest ona wykorzystywana, należy ją bezwzględnie wyłączyć.

7. Jeśli urządzenia sieciowe posiadają funkcję P2P i nie jest ona wykorzystywana, należy ją wyłączyć.

8. Jeśli urządzenia sieciowe obsługują protokół HTTPS do realizacji połączeń zaleca się jego stosowanie.

9. Jeśli urządzenia sieciowe obsługują funkcję filtracji adresów IP uprawnionych do nawiązywania połączenia zaleca się jej wykorzystywanie.

# POŁĄCZENIA SIECIOWE ZA POMOCĄ PRZEGLĄDARKI WWW

### 3. POŁĄCZENIE Z KOMPUTERA PC ZA POMOCĄ PRZEGLĄDARKI WWW

### 3.1. Pierwsze łączenie z kamerą

Po podłączeniu i skonfigurowaniu kamery można połączyć się z kamerą. W pasku adresu przeglądarki WWW należy wpisać adres IP kamery. Po połączeniu wyświetli się okno z oświadczeniem o ochronie prywatności, które należy zaakceptować przez zaznaczenie pola wyboru i naciśnięcie przycisku "Odczytane". Następnie kamera wyświetli okna konfiguracji strefy czasowej, a potem okno którym aktywacji, w którym definiuje się hasło administratora (oraz hasło do konta ONVIF). Kolejne okno to okno wyboru pytań bezpieczeństwa, pozwalających odzyskać dostęp do kamery w przypadku zapomnienia hasła administratora, bez konieczności resetowania urządzenia. Po przejściu tych kroków kamera zrestartuje się i wyświetli ekran logowania, w którym należy podać nazwę konta administratora (domyślnie root) oraz ustawione hasło.

Jeżeli pracujemy w przeglądarce Edge przełączonej w tryb Internet Explorera, to przeglądarka może poprosić o zainstalowanie dodatku NetAIIPCamera, który jest niezbędny do prawidłowego wyświetlania menu i obrazu kamery. Brak właściwego dodatku jest sygnalizowany przez wyświetlenie komunikatu:

The plugin is not installed or the version needs to be updated, please click Here to download and install. Before installation, please close your browser.

Należy kliknąć na łącze "Here" aby rozpocząć pobieranie dodatku a następnie, korzystając z okienka dialogowego przeglądarki, należy zainstalować go. W okienku należy kliknąć przycisk *Uruchom*, a następnie należy postępować zgodnie z poleceniami programu instalującego.

Czy chcesz zapisać lub uruchomić plik NetAlIPCamera.exe z witryny 192.168.41.207?				×
🕡 Ten typ pliku może być szkodliwy dla komputera.	Uruchom	Zapisz	•	Anuluj

í

Przy korzystaniu z przeglądarki używającej protokołu HTML5 (jak Firefox, Chrome, Opera, Safari) nie ma potrzeby instalowania jakichkolwiek dodatków i po zalogowaniu się, w oknie podglądu na żywo wyświetli się obraz.

# INTERFEJS WWW - PRACA Z KAMERĄ

### 4. INTERFEJS WWW - PRACA Z KAMERĄ

### 4.1 Wyświetlanie obrazu na żywo

Poniższy widok przedstawia okno zdalnego podglądu wyświetlone w przeglądarce Edge przełączonej w tryb Internet Explorera, z zainstalowanym dodatkiem "NetAIIPCamera". Podczas łączenia się z kamerą z przeglądarek korzystających z HTML5, niektóre elementy menu i/lub niektóre opcje mogą być niedostępne lub ograniczone. Nie jest to wada, ale wynika ze specyfiki standardu HTML5.



- 1. Wybór strumienia do wyświetlania w oknie podglądu oraz ustawienie rozmiaru bufora kamery.
- 2. Przyciski wyboru trybu pracy i konfiguracji kamery:
  - Podgląd- włącza podgląd strumienia na żywoUstawienia- wyświetla panel konfiguracyjny kameryWyszukiwanie- wyświetla okno odtwarzania nagrań zapisanych na karcie pamięciroot- informacja o zalogowanym użytkownikuWylogowanie- wyloguje aktualnie zalogowanego użytkownika

 $\mathbf{i}$ 

# PRZYWRACANIE USTAWIEŃ FABRYCZNYCH

3. Panel wyświetlania ikon zdarzeń alarmowych:



Od lewej: aktywacja wyjścia alarmowego, sygnalizacja nagrywania na kartę pamięci, zmiana kolorystyki, sabotaż, zmiana sceny, detekcja osób, detekcja PIR, alarm wejścia alarmowego, detekcja ruchu. Wystąpienie danego zdarzenia jest sygnalizowane migającym czerwonym kolorem.

4. Przyciski ustawiania obrazu:



Od lewej: rozmiar oryginalny, proporcje oryginalne, automatyczne dopasowanie do okna, pełny ekran.

5. Okno podglądu na żywo.

Dwukrotne kliknięcie lewym przyciskiem myszy na oknie podglądu włącza i wyłącza wyświetlanie obrazu na całym ekranie.

6. Przyciski sterujące funkcjami kamery:



Od lewej: włącza/wyłącza podgląd na żywo, włącza i wyłącza wyjście alarmowe, włącza dwukierunkowe audio, włącza odsłuch audio, wykonuje zdjęcie, włącza/wyłącza nagrywanie wideo na dysku komputera, przyciski cyfrowego zoomu, włącza/wyłącza wyświetlanie linii analizy obrazu

### 5. PRZYWRACANIE USTAWIEŃ FABRYCZNYCH

#### 5.1 Programowe przywracanie ustawień fabrycznych

Funkcja przywracania ustawień fabrycznych znajdują się w menu "Ustawienia -> Konserwacja -> Kopia zapasowa". Do wyboru jest opcja "Przywróć parametry domyślne", gdzie zaznaczenie wybranej opcji "Zatrzymaj" pozwala na zachowanie ustawień sieci, konfiguracji zabezpieczeń lub konfiguracji obrazu bez zmian. Ta opcja nie resetuje haseł użytkowników. Opcja "Przywróć ustawienia fabryczne" całkowicie resetuje wszystkie ustawienia kamery.

### 5.2 Sprzętowe przywracanie ustawień fabrycznych

Do sprzętowego przywracania ustawień fabrycznych kamery służy przycisk RESET umiejscowiony na tylnej ściance. Aby przywrócić ustawienia domyślne za pomocą przycisku RESET, należy wcisnąć go i przytrzymać przez około 5 sekund.



# AAT SYSTEMY BEZPIECZEŃSTWA Sp. z o.o. ul. Puławska 431, 02-801 Warszawa, Polska

ul. Puławska 431, 02-801 Warszawa, Polska tel.: 22 546 0 546, kontakt@aat.pl www.novuscctv.com/pl